



# 2020 Dehumidifier Command Hub Guide

## Home Screen

### Unit OFF

Unit must be plugged in.

Press  **MENU** to access settings and configuration controls

Press  **PURGE** to pump out condensate tank


Press  **ON/OFF** to turn unit on



### Unit ON

- Job hours and Time
- Inlet/Outlet temp, %RH and GPP
- Current GPP removal


#### Bottom menu bar:

 Quick-Reference Inlet GPP  
1 drop: < 60 GPP  
2 drops: 60–90 GPP  
3 drops: > 90 GPP

Press  **MENU** to access settings and configuration controls

Press  **PURGE** to pump out condensate tank

Press  **ON/OFF** to turn unit on.

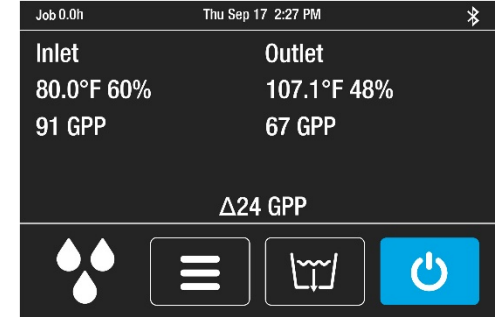

# Menu Structure

